VOLVO CONSTRUCTION EQUIPMENT

MATRIS REPORT

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

Company name	Dealer	Report Issuer
VFS-Lease	Flagler / Penn Jersey	
Contact name	**Technician**	**Primary Application**
	S McDaniel	Earth moving construction
Site	**Workorder**	**Ground Condition**

MATRIS Reading, Summary / Recommendation

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

Main equipment	Type	Equipment
	Tyre size/class	Sold without tyres
	Body extensions	Not mounted
	Tail-gate	Not mounted
	Extra spillguard	Not mounted
	Wear plates	Not mounted
	Pattern	None

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

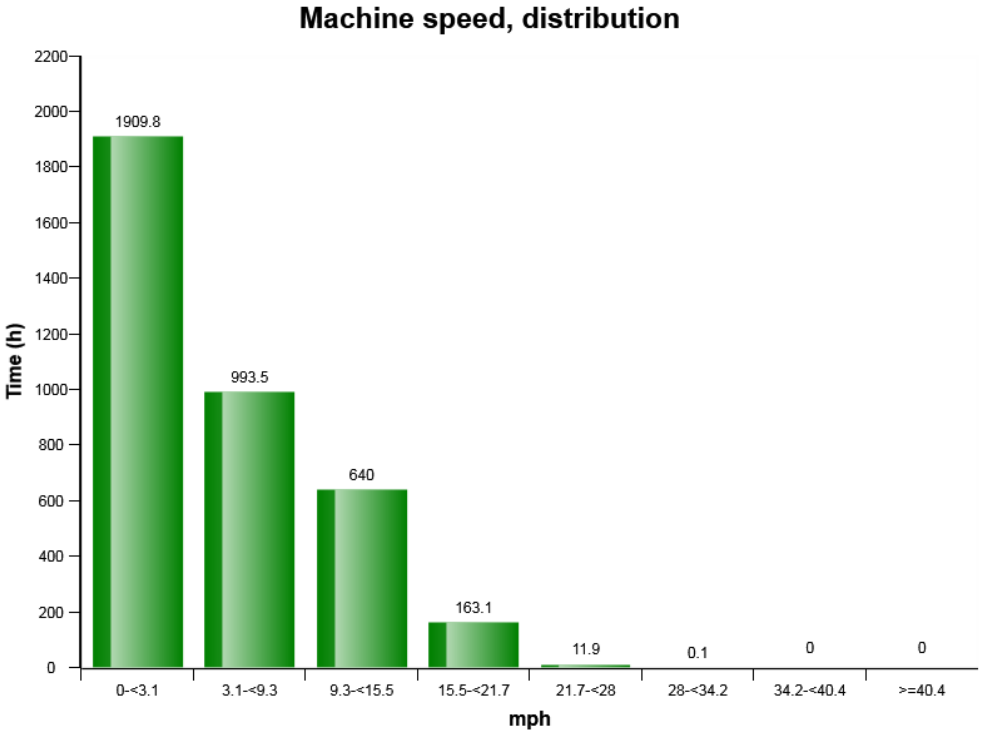

The presentation shows the time in hours in speed-intervals for the machine.

Note that the interval 0-3,1 mile/h includes machine not in motion. If the machine has been operated above 34,2 Mile/h there is a risk of engine over speed, check "Engine speed, over 2100 rpm"

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

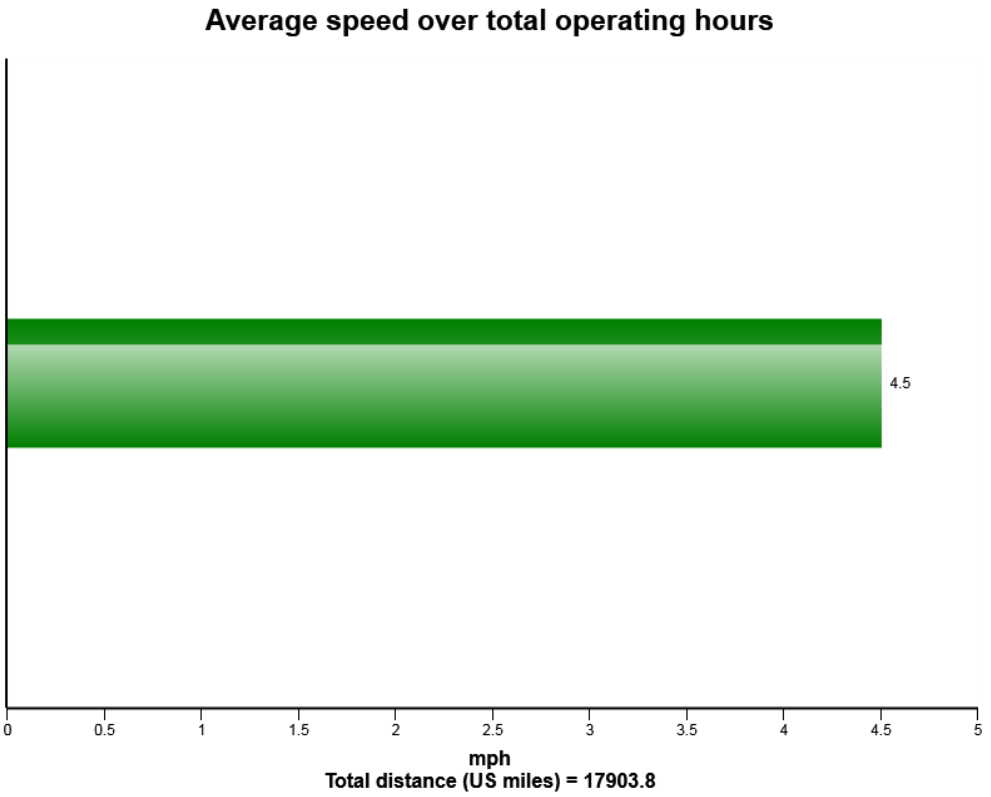

The diagram shows the machines average speed based on the total operating hours

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

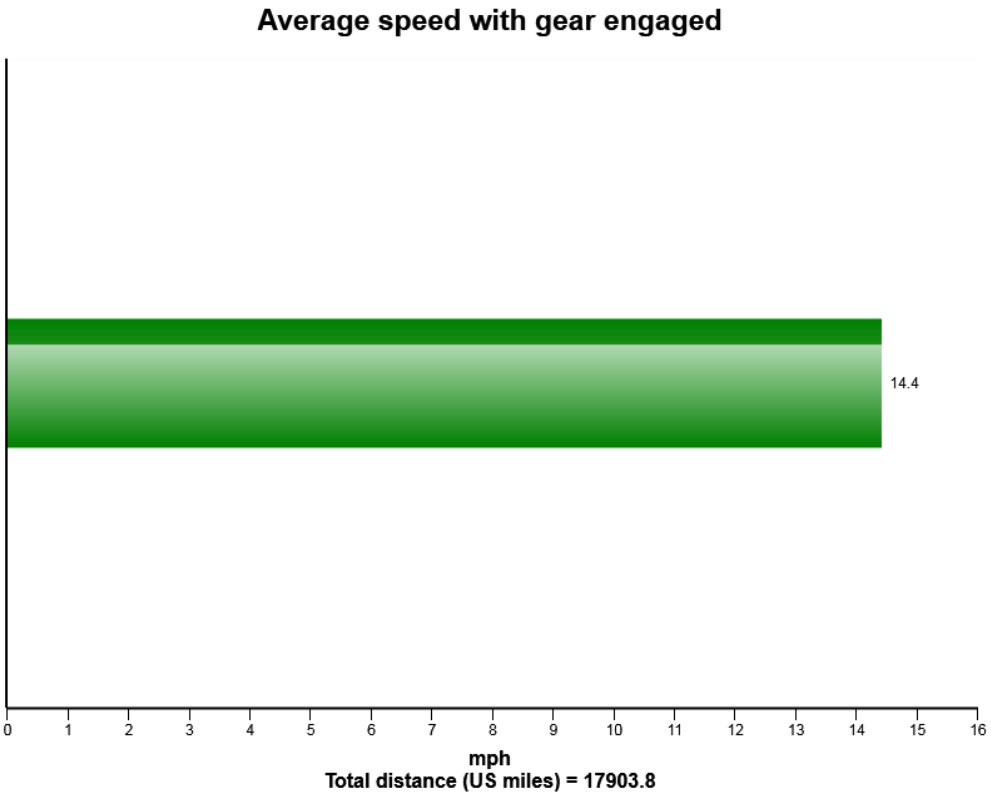

The diagram shows the machines average speed based on the operating hours with gear engaged.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

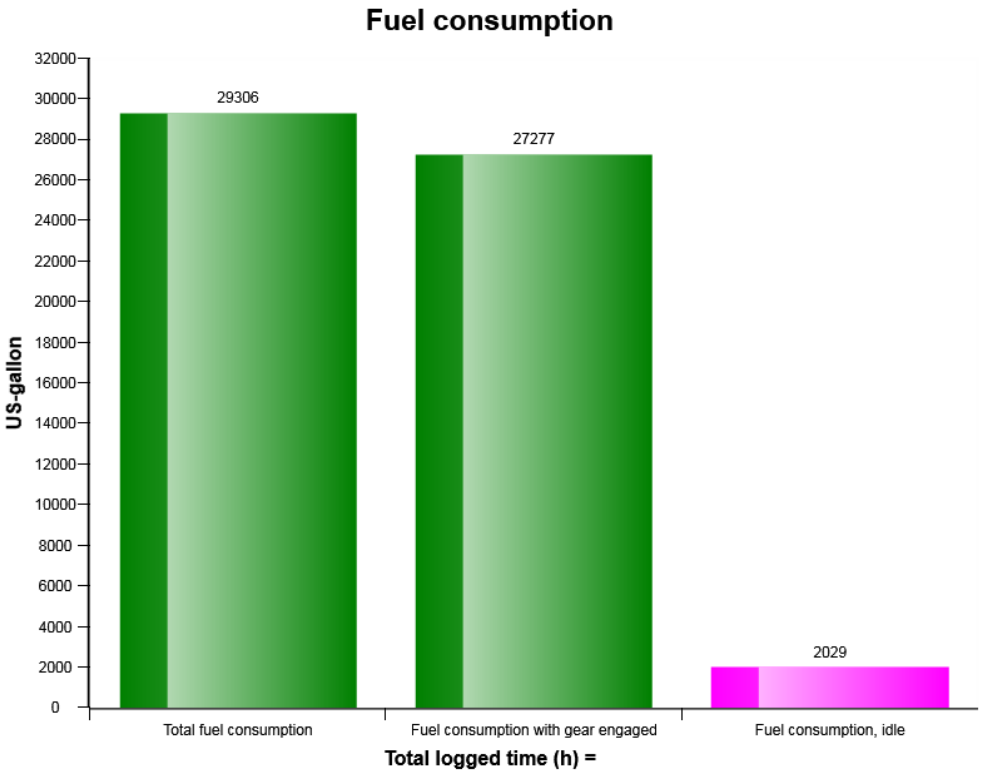

An error has occurred while processing HtmlTextBox 'htmlTextBox1':
'WordSection1' is an unexpected token. The expected token is "" or "". Line 1, position 18.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

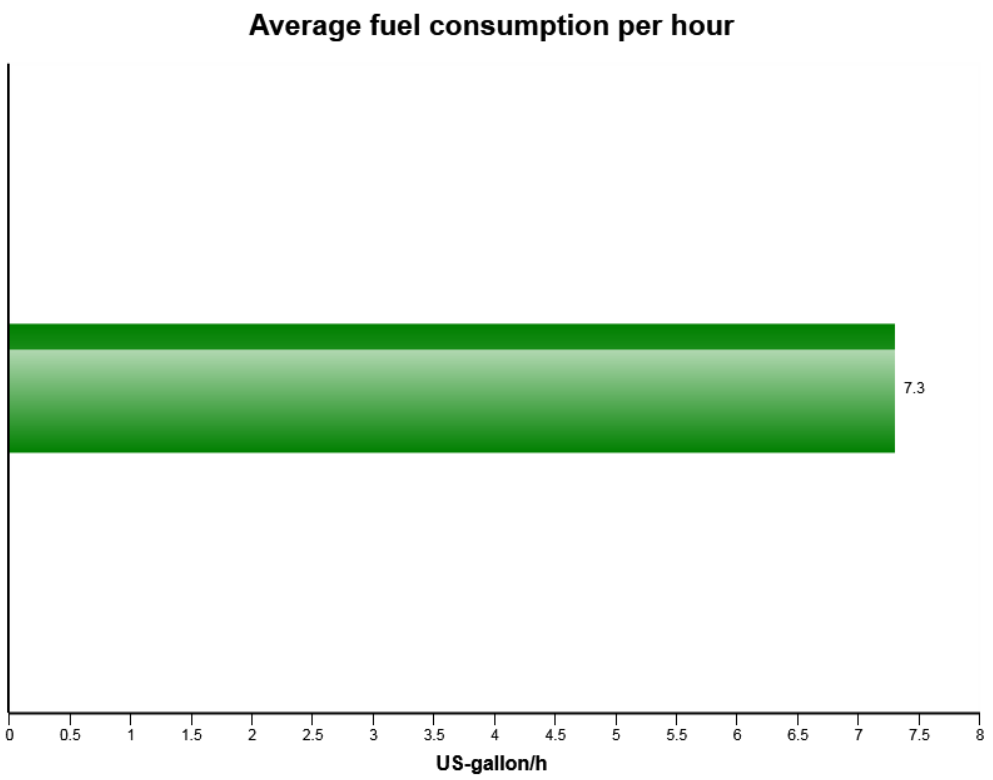

The diagram shows the average fuel consumption based on total operating hours

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

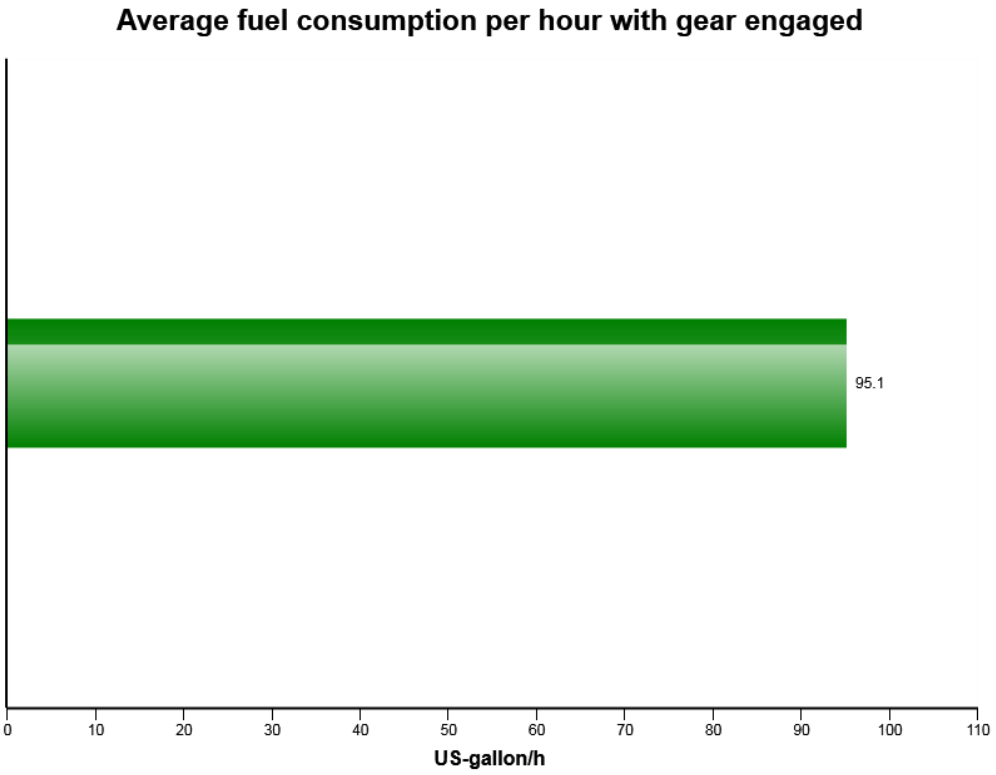

The diagram shows the average fuel consumption based on operating hours with gear engaged

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

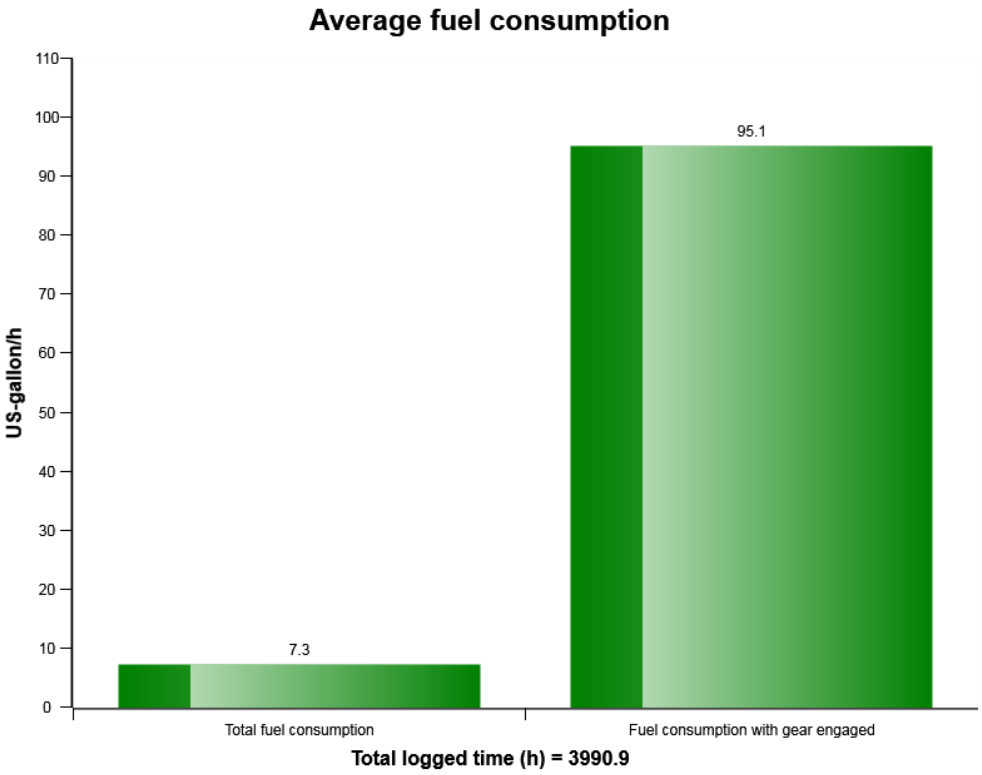

An error has occurred while processing HtmlTextBox 'htmlTextBox1':
'WordSection1' is an unexpected token. The expected token is "" or "". Line 1, position 18.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

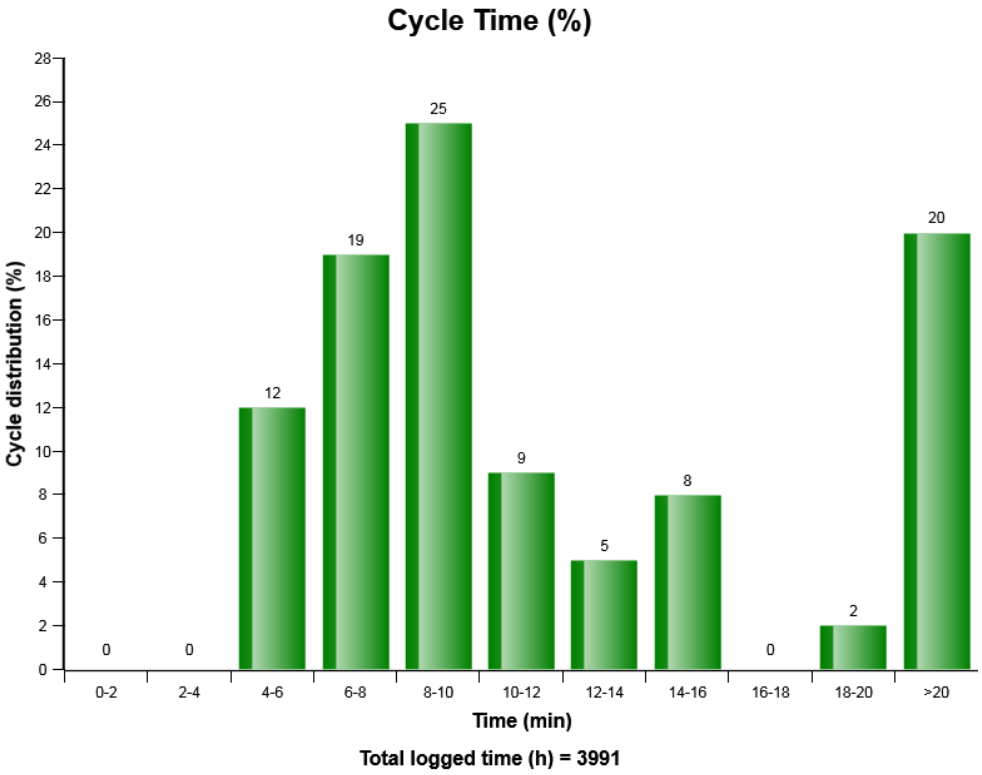

The diagram shows the distribution of the working cycle time. The time between 2 valid cycle registrations is registered. Time starts from lifting the body.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

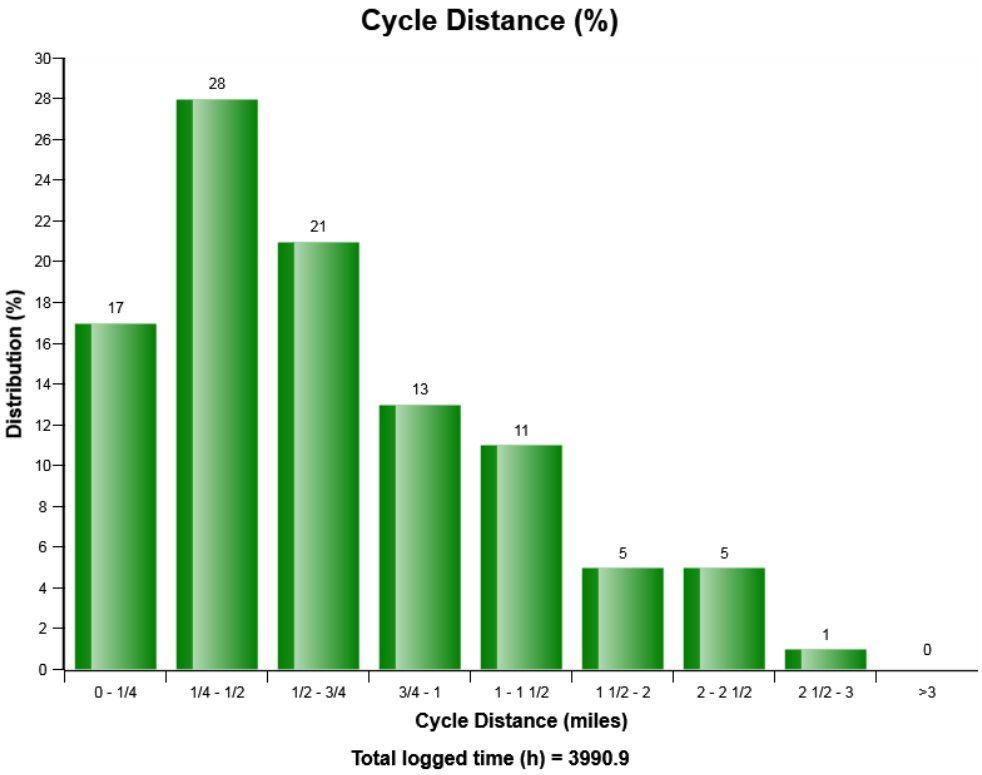

The diagram shows the distribution of the working cycle distance. The distance driven between 2 valid cycle registrations.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

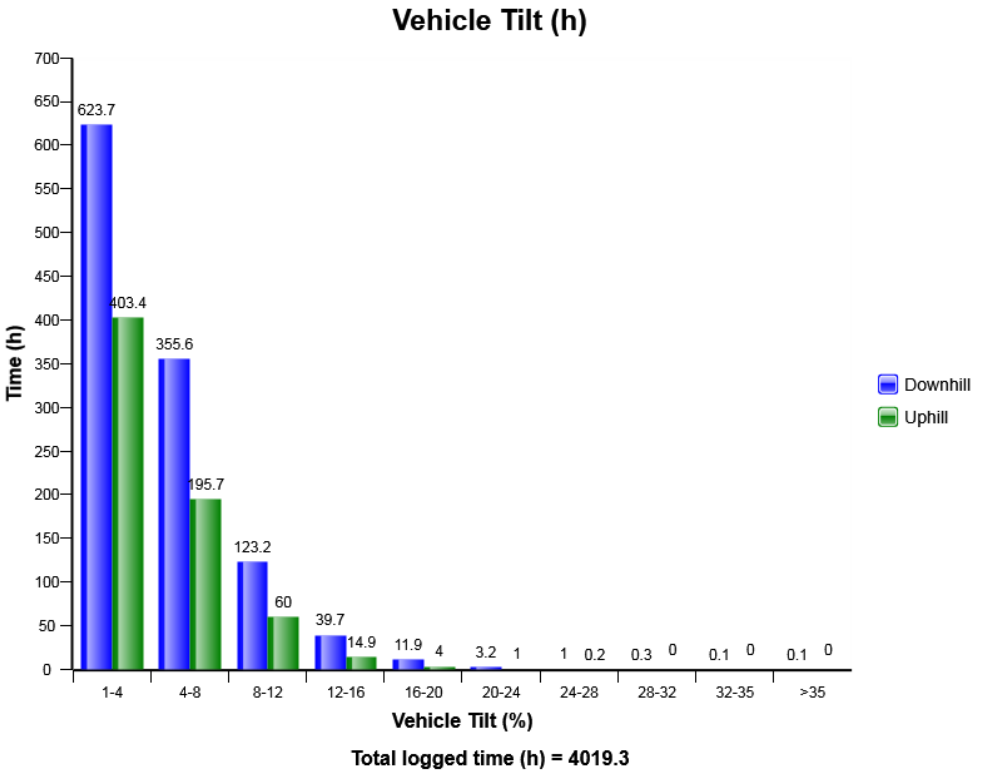

The diagram shows the distribution of the longitudinal tilt in percent (not degrees), the criteria to get registrations is that the vehicle speed exceeds 1km/h (0,62mph) and that the engine is on.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

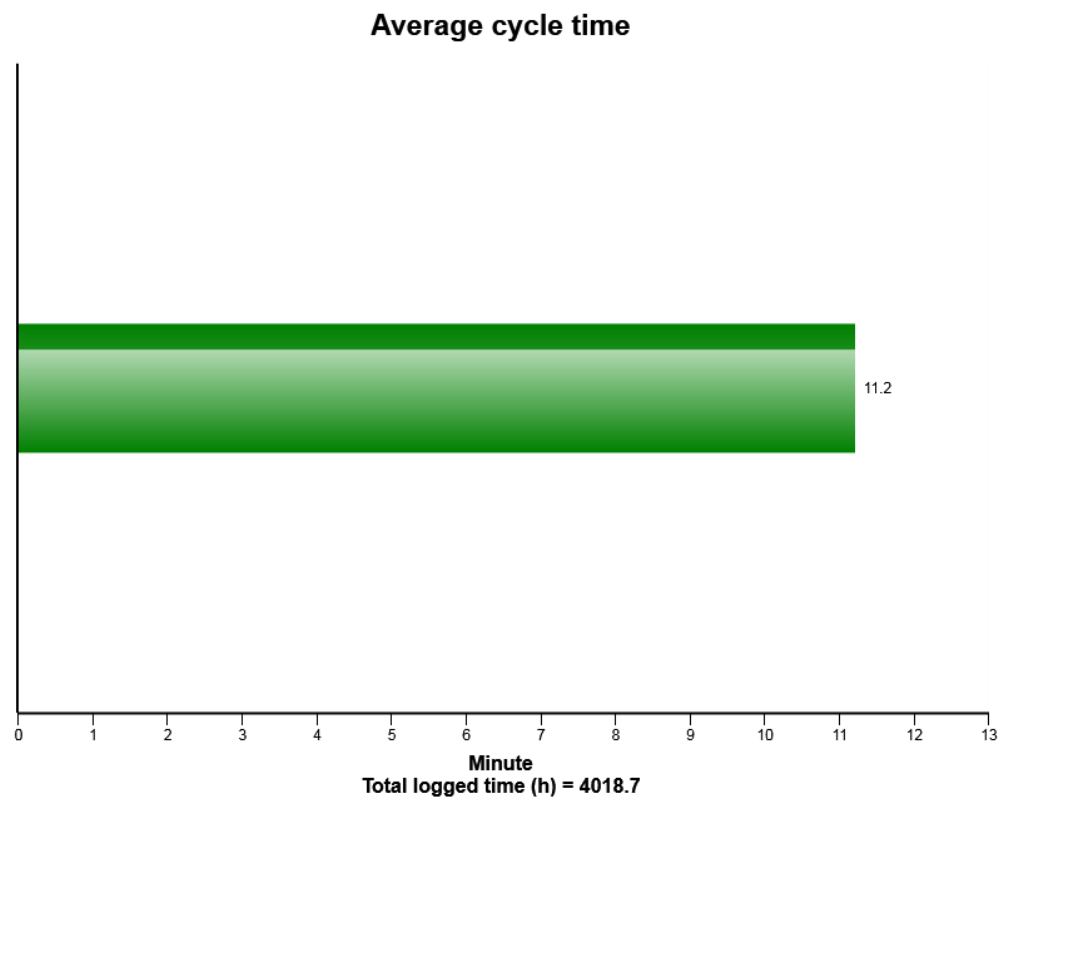

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

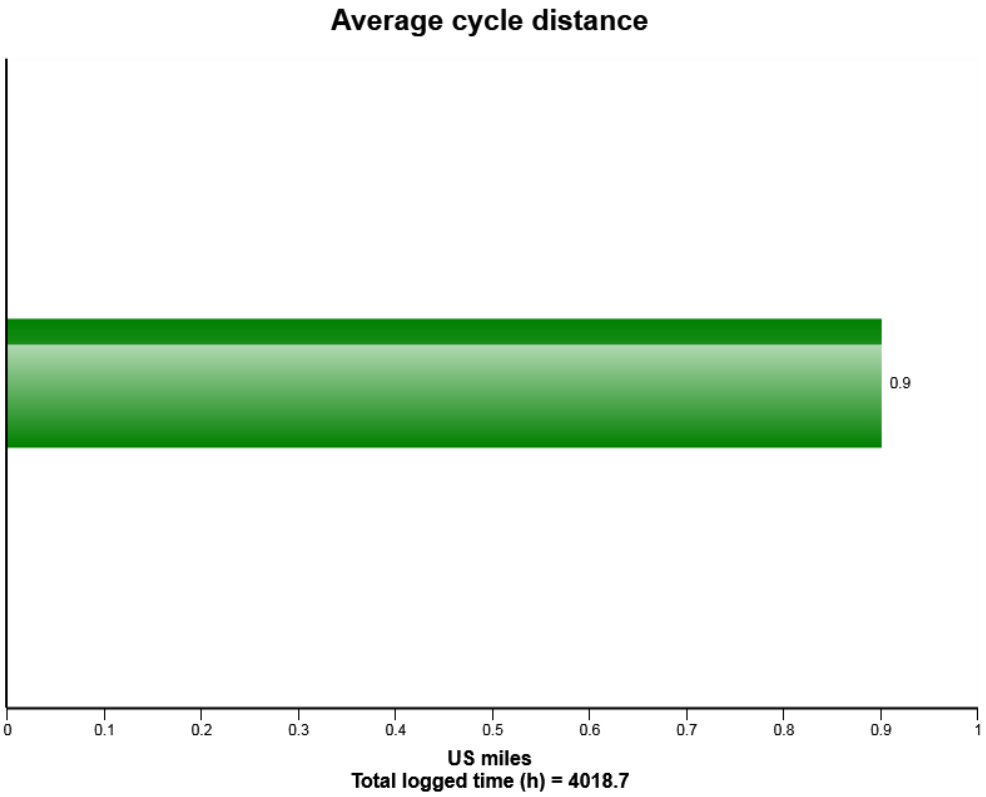

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

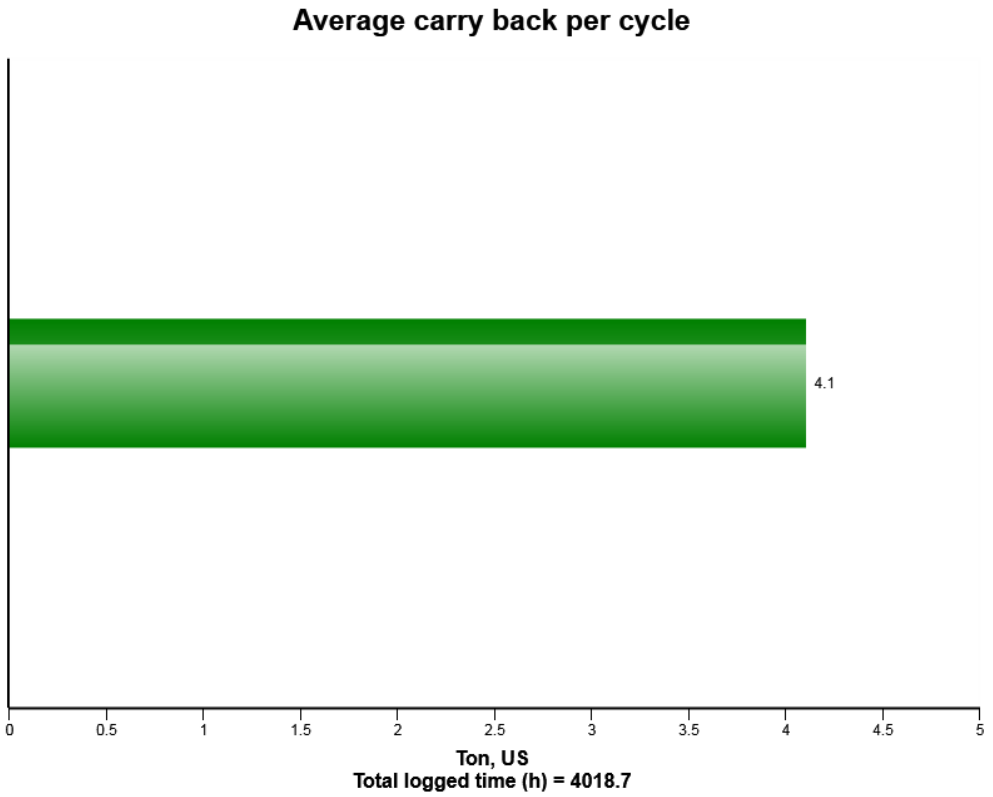

An error has occurred while processing HtmlTextBox 'htmlTextBox1':
'WordSection1' is an unexpected token. The expected token is "" or "". Line 1, position 18.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

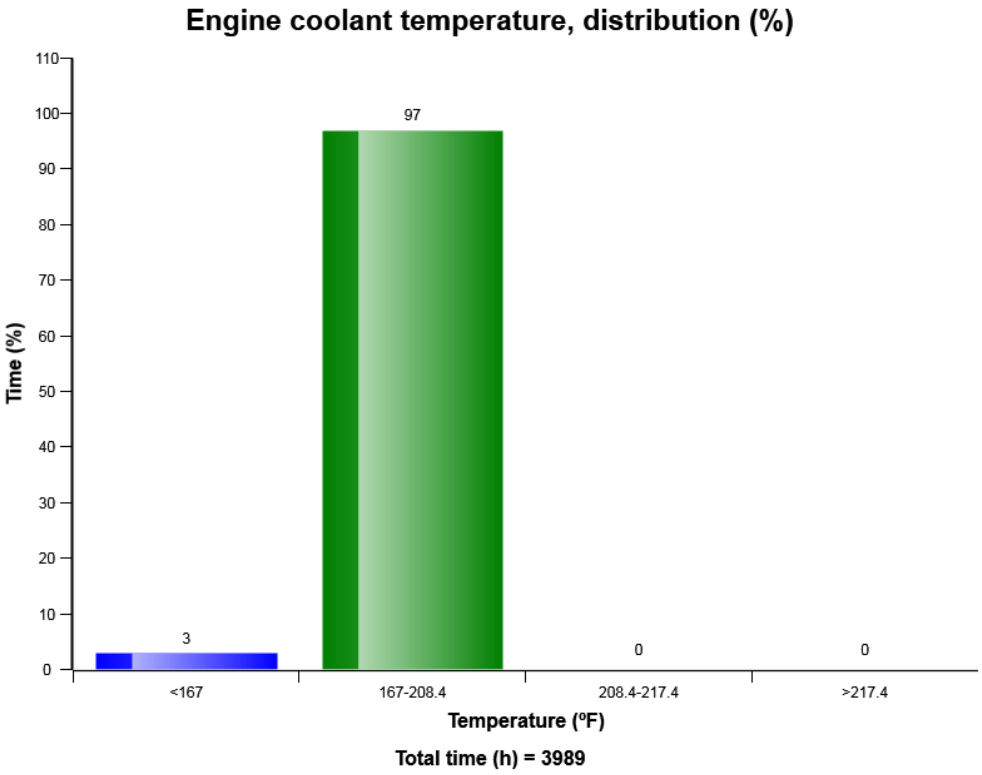

Definition:

The graph shows the time distribution of the temperature, while engine running.

Explanation:

Y-axis: Time

X-axis: Temperature distribution in classes.

Blue bar = Warm-up phase.

During the engine warm-up phase, this temperature region is passed.

It is normal to have registrations in this region.

Green bar = Normal working temperature. The Major part of the registrations shall be in this

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

region.

Yellow bar = High working temperature. It is normal to have some registrations in this region.

Red bar = Alarm.

Registrations in this region is not normal, running in this region may cause severe damage.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

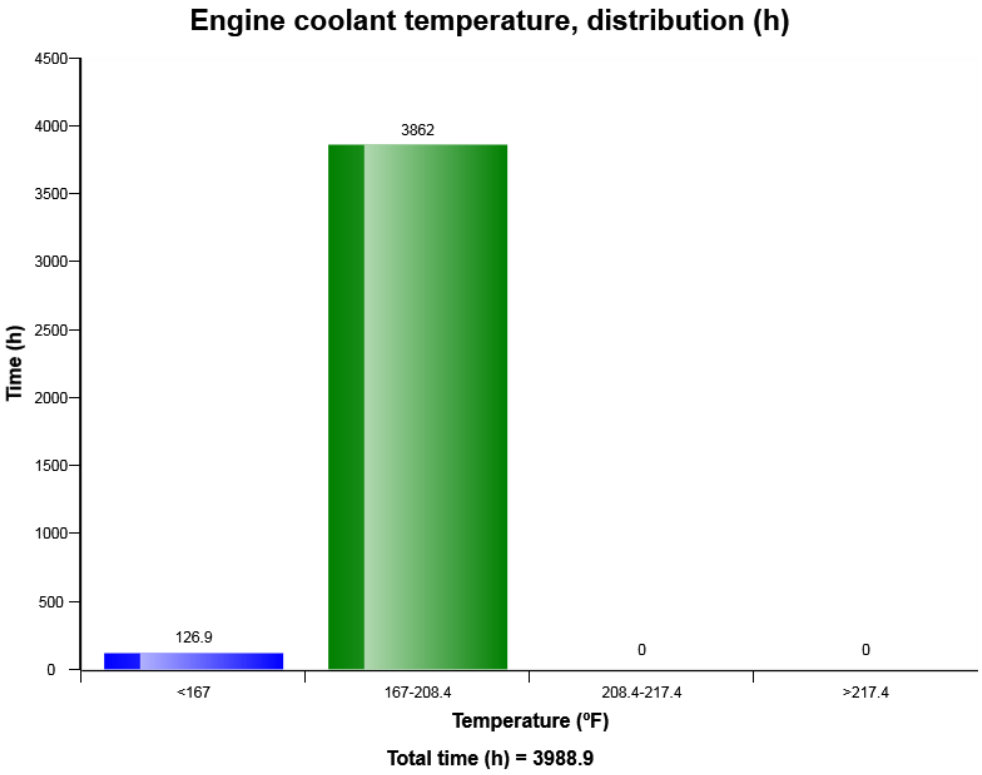

Definition:

The graph shows the time distribution of the temperature, while engine running.

Explanation:

Y-axis: Time

X-axis: Temperature distribution in classes.

Blue bar = Warm-up phase.

During the engine warm-up phase, this temperature region is passed.

It is normal to have registrations in this region.

Green bar = Normal working temperature. The Major part of the registrations shall be in this

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

region.

Yellow bar = High working temperature. It is normal to have some registrations in this region.

Red bar = Alarm.

Registrations in this region is not normal, running in this region may cause severe damage.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

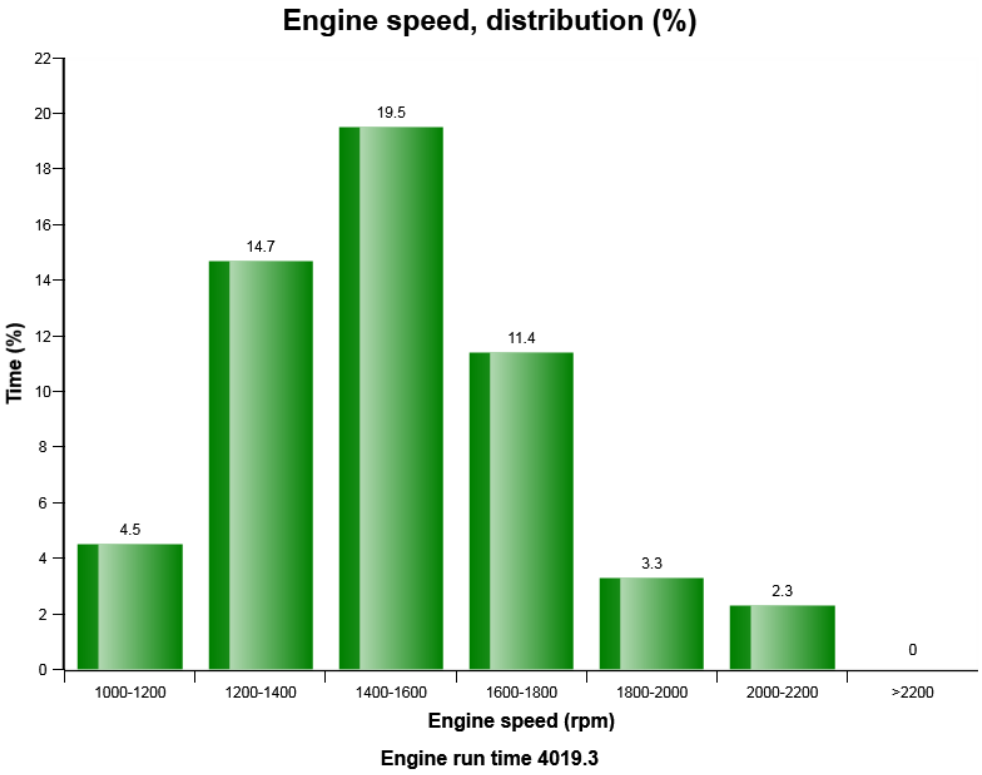

An error has occurred while processing HtmlTextBox 'htmlTextBox1':
'WordSection1' is an unexpected token. The expected token is "" or "". Line 1, position 18.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

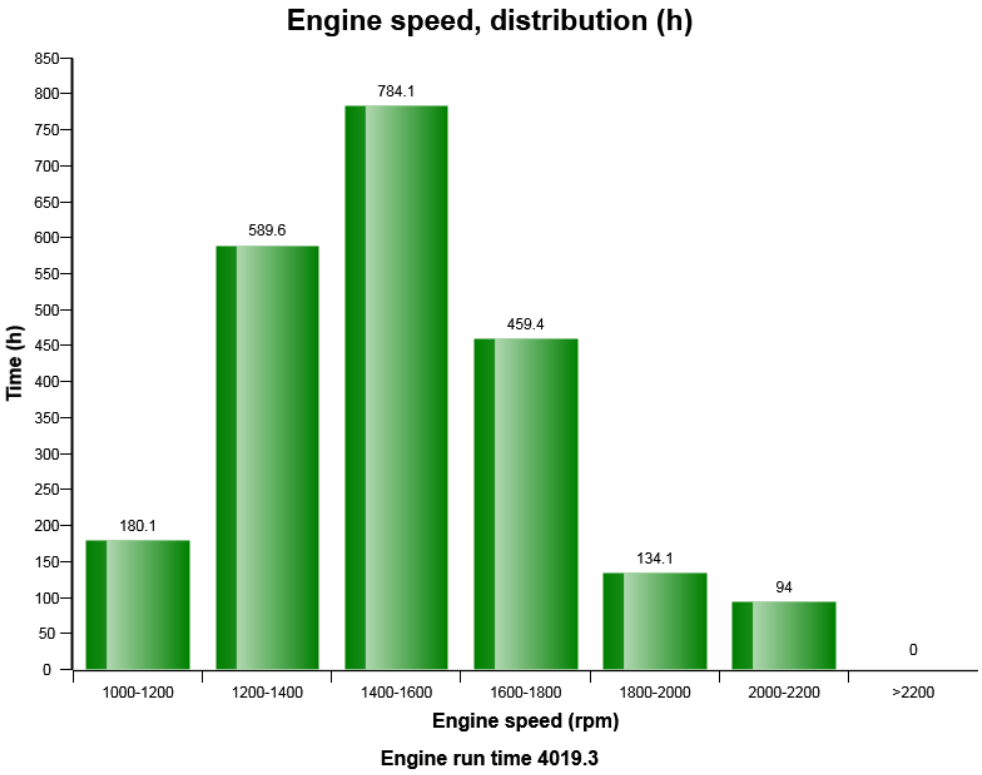

An error has occurred while processing HtmlTextBox 'htmlTextBox1':
'WordSection1' is an unexpected token. The expected token is "" or "". Line 1, position 18.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

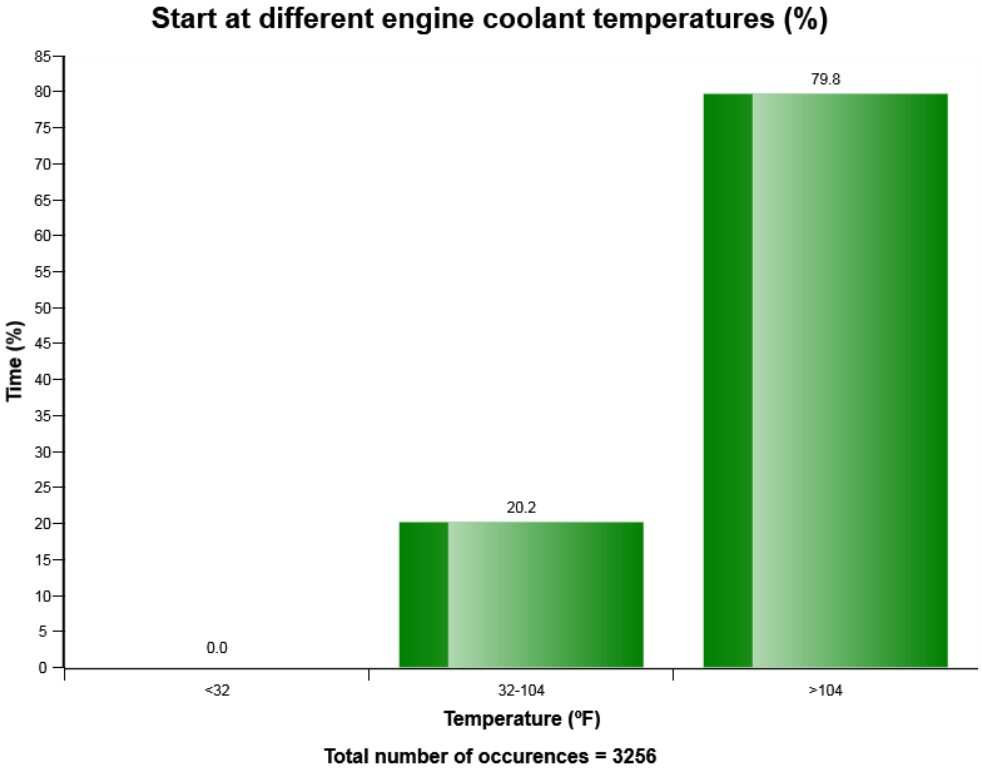

Definition:

The graph shows the distribution of engine coolant temperature, at the starting moment.

Explanation:

Y-axis: Number of engine starts

X-axis: Engine coolant temperature.

A great proportion of engine wear is due to cold starts. Try to avoid extremely cold starts. Try using an electric coolant heater.

Under the graph the total number of engine starts is displayed.

Also see " *Number of starts / hour*" to get a complete picture of engine starting.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

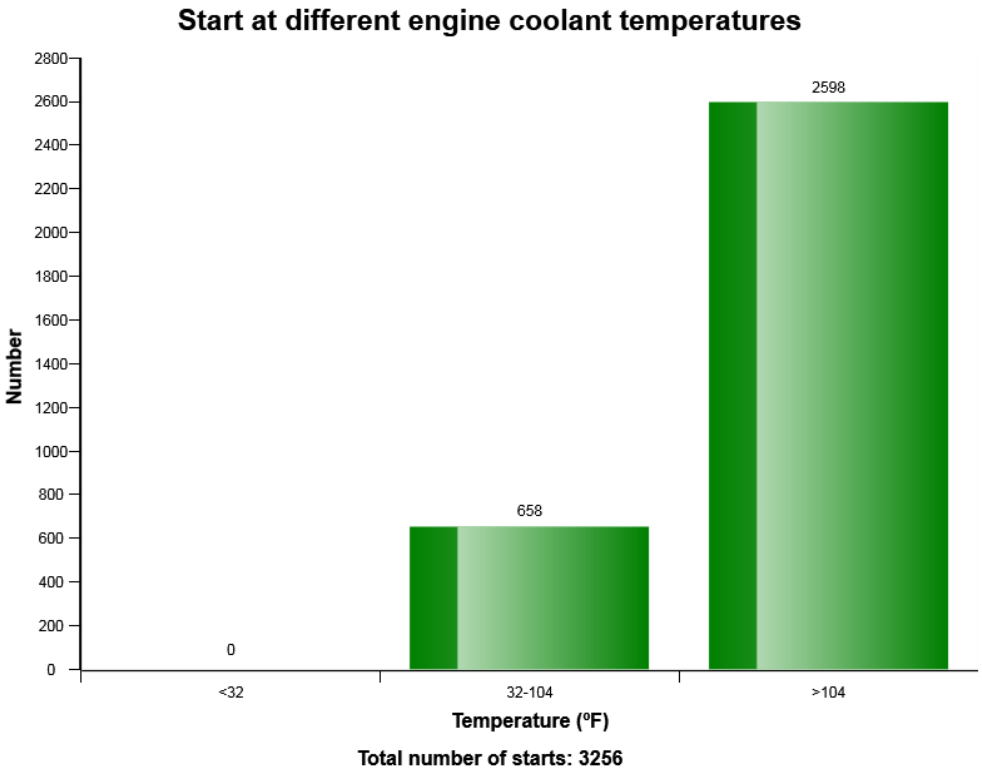

Definition:

The graph shows the distribution of engine coolant temperature, at the starting moment.

Explanation:

Y-axis: Number of engine starts

X-axis: Engine coolant temperature.

A great proportion of engine wear is due to cold starts. Try to avoid extremely cold starts. Try using an electric coolant heater.

Under the graph the total number of engine starts is displayed.

Also see " *Number of starts / hour*" to get a complete picture of engine starting.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

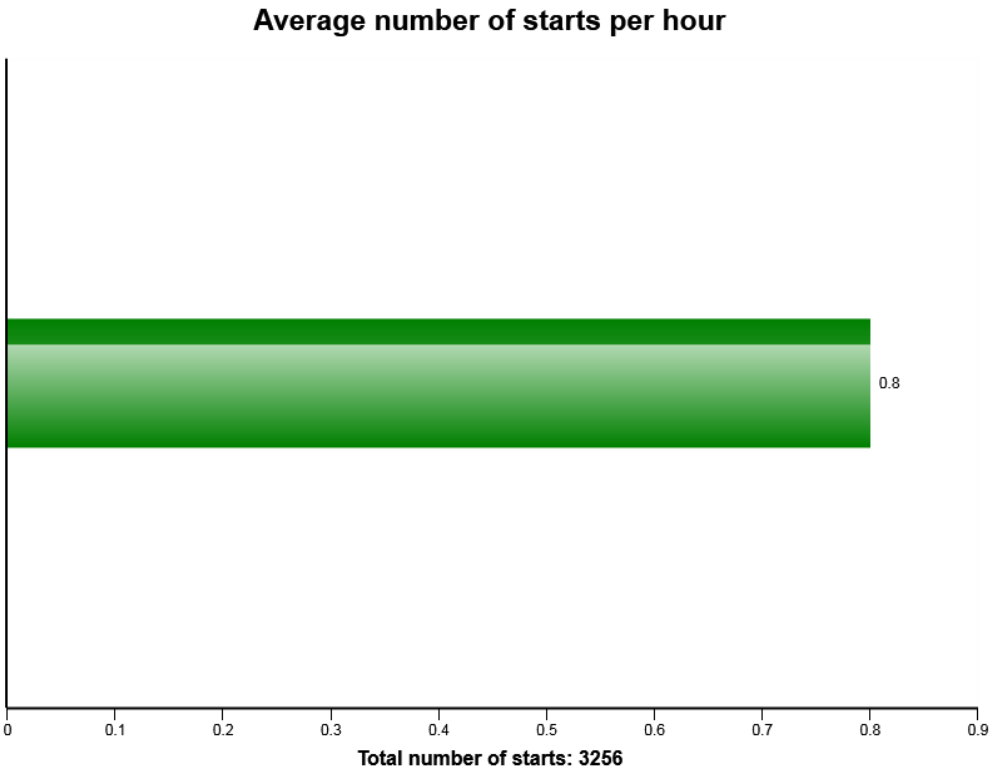

Definition:

The graph describes the average number of engine starts per engine running hour.

Explanation:

X-axis: Number of average starts per hour.

The actual time used for calculation, is time with engine on

If the fuel consumption is high one reason may be that the engine is not turned off often enough, perhaps machine is left idling for long periods. Check " Machine utilization".

The value can vary a lot depending on in which application the machine is used.

To see at which different temperatures engine is started see" Start at different engine temperatures."

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

Green bar = Number of average starts per hour

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

High engine coolant temperature
Total number of occurences = 0

	Op hours	Year	Month	Day	Hour	Minute	Duration (sec)	Extreme (° F)
A	0	2000	0	0	0	0	0	32
B	0	2000	0	0	0	0	0	32
C	0	2000	0	0	0	0	0	32
D	0	2000	0	0	0	0	0	32
E	0	2000	0	0	0	0	0	32
F	0	2000	0	0	0	0	0	32
G	0	2000	0	0	0	0	0	32
H	0	2000	0	0	0	0	0	32
I	0	2000	0	0	0	0	0	32
J	0	2000	0	0	0	0	0	32

Definition :

This type of table shows the latest occasions when a specific event has occurred. When a specified criteria is fulfilled a registration is made. Each table row corresponds to one occasion. Operating hours is displayed in the first column, followed by year, month, day, hour and minute to show when an event has occurred.

The rows are not ordered chronological (The latest event may be in the middle).

Only one event per minute is registered.

Over the table the total number of events is displayed.

Duration :

The duration of each event is shown after the timestamp of the event.

The duration is counted as long as the criteria is fulfilled.

Extreme value :

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

The extreme value column displays the most extreme value during the event.

Criteria :

The criteria to get an registration, is that the alarm signal for high engine coolant temperature is active and that the diesel engine is running.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

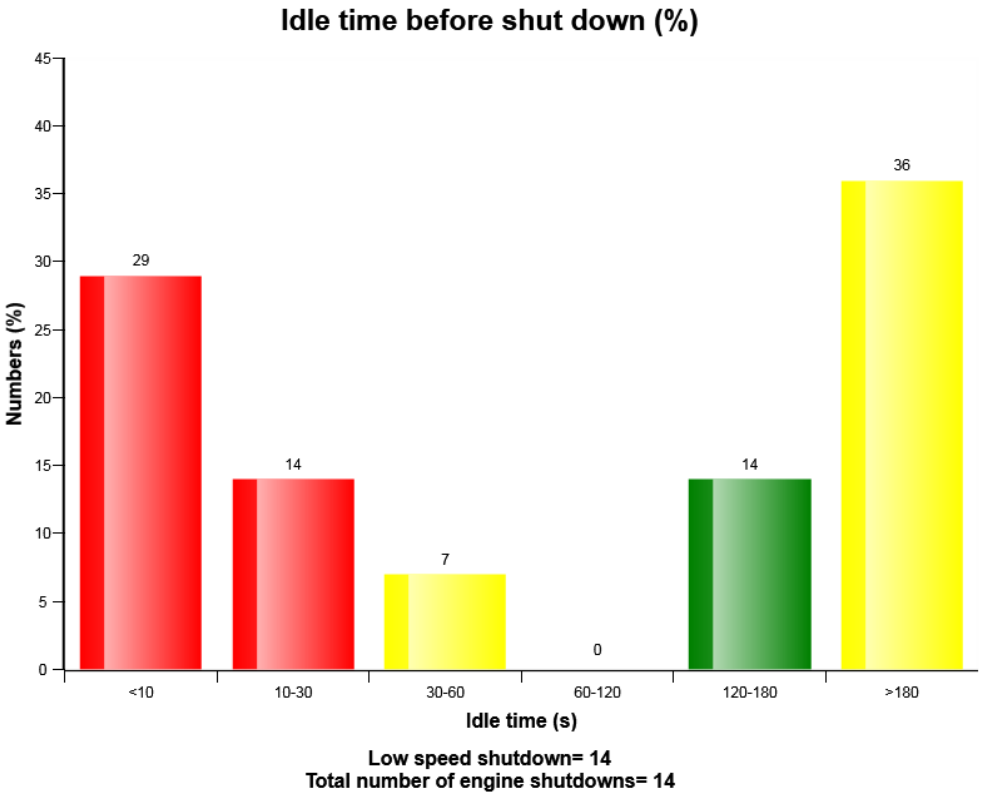

Definition:

This graph shows the distribution of delayed time at low idle speed until the engine is turned off.

The delayed time distribution for each bar is shown on top of its column in percentage.

The sum of bars is 100%.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

High engine oil temperature
Total number of occurences = 0

	Op hours	Year	Month	Day	Hour	Minute	Duration (sec)	Extreme (° F)
A	0	2000	0	0	0	0	0	32
B	0	2000	0	0	0	0	0	32
C	0	2000	0	0	0	0	0	32
D	0	2000	0	0	0	0	0	32
E	0	2000	0	0	0	0	0	32
F	0	2000	0	0	0	0	0	32
G	0	2000	0	0	0	0	0	32
H	0	2000	0	0	0	0	0	32
I	0	2000	0	0	0	0	0	32
J	0	2000	0	0	0	0	0	32

Definition :

This type of table shows the latest occasions when a specific event has occurred. When a specified criteria is fulfilled a registration is made. Each table row corresponds to one occasion. Operating hours is displayed in the first column, followed by year, month, day, hour and minute to show when an event has occurred.

The rows are not ordered chronological (The latest event may be in the middle).

Only one event per minute is registered.

Over the table the total number of events is displayed

Duration :

The duration of each event is shown after the timestamp of the event.

The duration is counted as long as the criteria is fulfilled.

Extreme value :

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

The extreme value column displays the most extreme value during the event.

Criteria :

The criteria to get an registration, is that the alarm signal for high engine oil temperature is active and that the diesel engine is running.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

Starter overheating
Total number of occurences = 0

Op hours	Year	Month	Day	Hour	Minute
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0

Definition:

The starter can be damaged if it is overheated.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

Alarm is registered if the starter is used continuously more than 40 seconds and if it is less than five minutes since the latest alarm.

Explanation:

X-axis: Number of times that the starter alarm has been activated.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

Low Air filter pressure
Total number of occurences = 0

Op hours	Year	Month	Day	Hour	Minute	Duration (sec)
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0

Definition :

This type of table shows the latest occasions when a specific event has occurred. When a specified criteria is fulfilled a registration is made. Each table row corresponds to one occasion. Operating

hours is displayed in the first column, followed by year, month, day, hour and minute to show when an event has occurred.

The rows are not ordered chronological (The latest event may be in the middle).

Only one event per minute is registered.

Over the table the total number of events is displayed.

Duration :

The duration of each event is shown after the timestamp of the event.

The duration is counted as long as the criteria is fulfilled.

Criteria :

The criteria to get an registration, is that the alarm signal for air filter clogged is active, and that the diesel engine is running.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

Regeneration ignored
Total number of ignored regenerations 0

	Op hours	Year	Month	Day	Hour	Minute	Duration (min)
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0
*	0	2000	0	0	0	0	0

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

Regeneration aborted
Total number of occurences = 0

Op hours	Year	Month	Day	Hour	Minute
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0
0	2000	0	0	0	0

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

Regeneration duration
Total number of occurences = 21

Op hours	Year	Month	Day	Hour	Minute	Duration (min)
998	2015	11	20	10	29	45
1286	2016	1	11	15	50	42
1787	2016	4	1	13	43	43
2287	2016	6	24	10	15	1
2287	2016	6	24	10	28	47
2770	2016	9	24	11	23	33
2771	2016	9	26	7	51	30
2771	2016	9	26	6	58	4
2771	2016	9	26	6	56	2
2862	2016	10	12	9	34	51
3067	2016	11	16	13	19	50
3176	2016	12	8	13	41	30
3203	2016	12	14	6	57	1
3203	2016	12	14	7	14	19
3204	2016	12	14	7	54	35
3239	2017	1	9	14	35	0
3634	2017	3	17	14	44	17
3635	2017	3	20	6	49	38
3758	2017	4	7	8	53	29
3758	2017	4	7	8	0	25

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

Water level warning in water separator
Total number of occurences = 1

Op hours	Year	Month	Day	Hour	Minute	Duration (min)
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
0	2000	0	0	0	0	0
2943	2016	10	27	13	41	0

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

High voltage
Total number of occurences = 0

Op hours	Year	Month	Day	Hour	Minute	Duration (sec)	Extreme value
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0

Definition :

This type of table shows the latest occasions when a specific event has occurred. When a specified criteria is fulfilled a registration is made. Each table row corresponds to one occasion. Operating

hours is displayed in the first column, followed by year, month，day，hour and minute to show when an event has occurred.

The rows are not ordered chronological (The latest event may be in the middle).

Only one event per minute is registered.

Over the table the total number of events is displayed

Duration：

The duration of each event is shown after the timestamp of the event.

The duration is counted as long as the criteria is fulfilled.

Extreme value：

The extreme value column displays the most extreme value during the event.

Criteria：

Logging is performed when, Alarm high system voltage , is active.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

Low voltage
Total number of occurences = 0

Op hours	Year	Month	Day	Hour	Minute	Duration (sec)	Extreme value
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0

Definition :

This type of table shows the latest occasions when a specific event has occurred. When a specified criteria is fulfilled a registration is made. Each table row corresponds to one occasion. Operating

hours is displayed in the first column, followed by year, month，day，hour and minute to show when an event has occurred.

The rows are not ordered chronological (The latest event may be in the middle).

Only one event per minute is registered.

Over the table the total number of events is displayed

Duration：

The duration of each event is shown after the timestamp of the event.

The duration is counted as long as the criteria is fulfilled.

Extreme value：

The extreme value column displays the most extreme value during the event.

Criteria：

Logging is performed when, Alarm low system voltage , is active.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

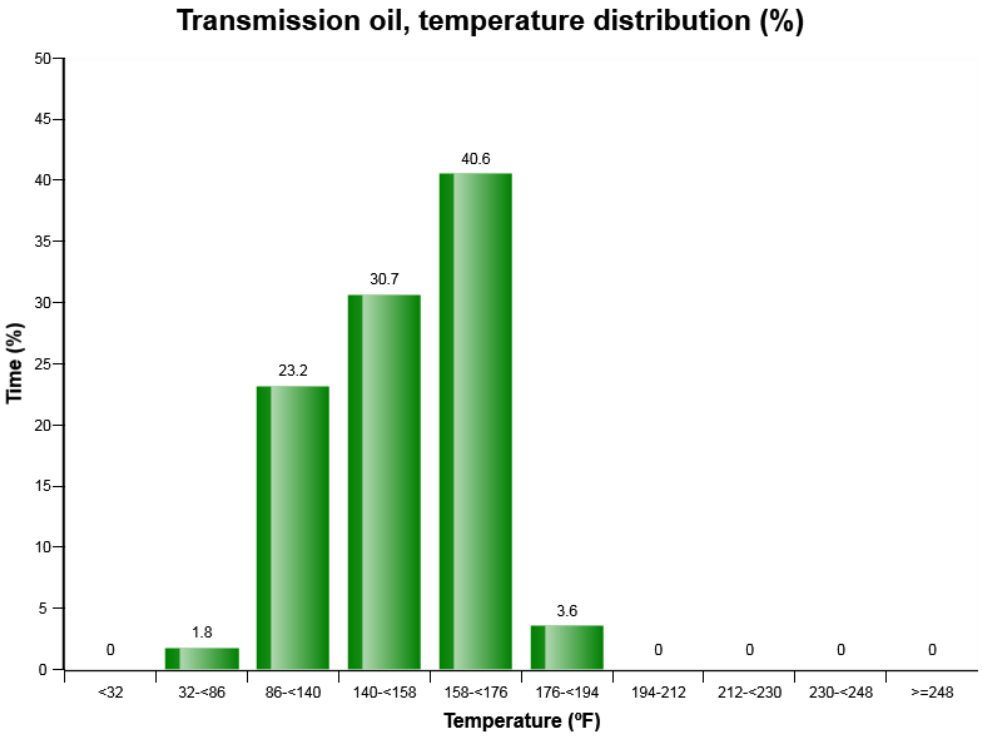

The diagram shows the transmission oil temperature in various temperature ranges. The time is displayed in the following ten temperature ranges:

<32ºF Temperatures below 32ºF

32-<86ºF Temperatures from 32ºF until 86ºF

86-<140ºF Temperatures from 86ºF until 140ºF

140-<158ºF Temperatures from 140ºF until 158ºF

158-<176ºF Temperatures from 158ºF until 176ºF

176-<194ºF Temperatures from 176ºF until 194ºF

194-<212ºF Temperatures from 194ºF until 212ºF

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

212-<230ºF Temperatures from 212ºF until 230ºF

230-<248ºF Temperatures from 230ºF until 248ºF

>248ºF Temperatures over 248ºF

The bar that describes temperatures from 230ºF until 248ºF is yellow and means that the oil has began to be overheated. Driver has been given orange central warning

The bar that describes >248ºF is red and means that the oil has been overheated. Driver has been given red central warning.

Oil temperatures exceeding 230ºF must be avoided since the properties of the oil are degraded

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

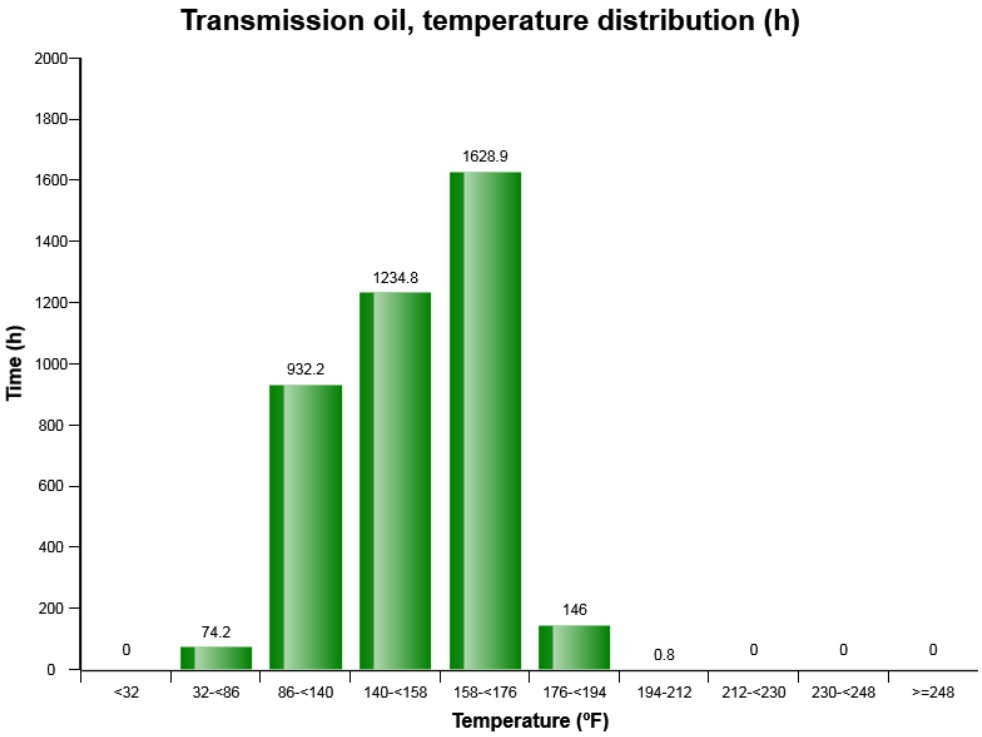

The diagram shows the transmission oil temperature in various temperature ranges. The time is displayed in the following ten temperature ranges:

<32ºF Temperatures below 32ºF

32-<86ºF Temperatures from 32ºF until 86ºF

86-<140ºF Temperatures from 86ºF until 140ºF

140-<158ºF Temperatures from 140ºF until 158ºF

158-<176ºF Temperatures from 158ºF until 176ºF

176-<194ºF Temperatures from 176ºF until 194ºF

194-<212ºF Temperatures from 194ºF until 212ºF

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

212-<230ºF Temperatures from 212ºF until 230ºF

230-<248ºF Temperatures from 230ºF until 248ºF

>248ºF Temperatures over 248ºF

The bar that describes temperatures from 230ºF until 248ºF is yellow and means that the oil has began to be overheated. Driver has been given orange central warning

The bar that describes >248ºF is red and means that the oil has been overheated. Driver has been given red central warning.

Oil temperatures exceeding 230ºF must be avoided since the properties of the oil are degraded

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

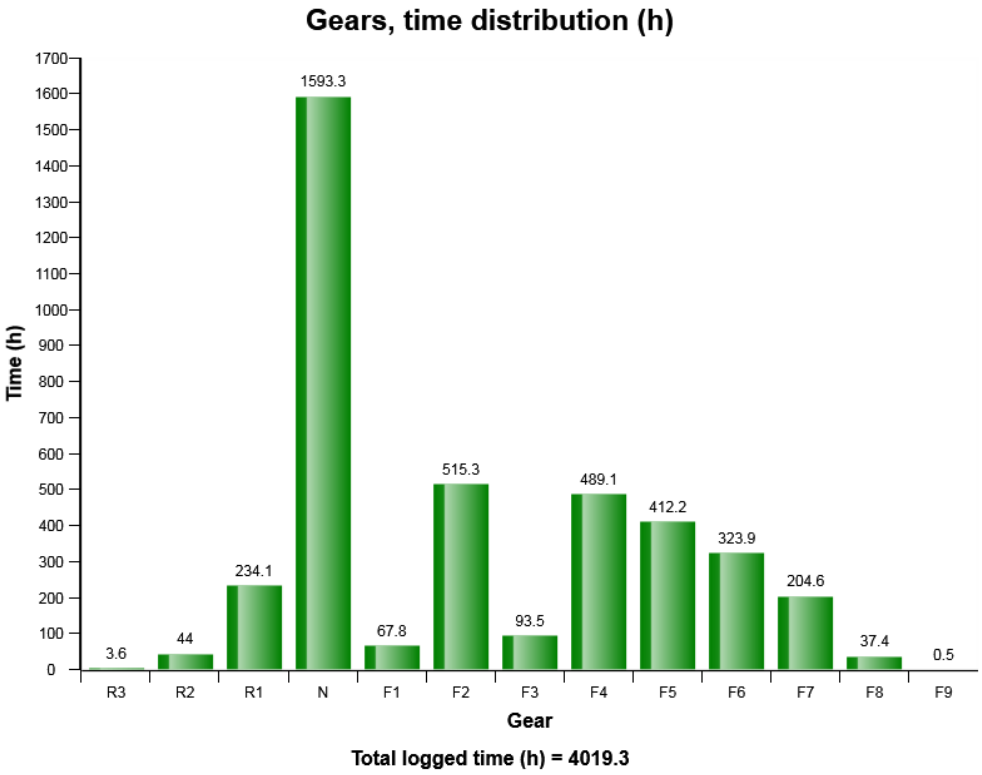

The diagram shows the time for each gear. Each bar represents a gear.

How the time is distributed between the gears depends on the operating conditions.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

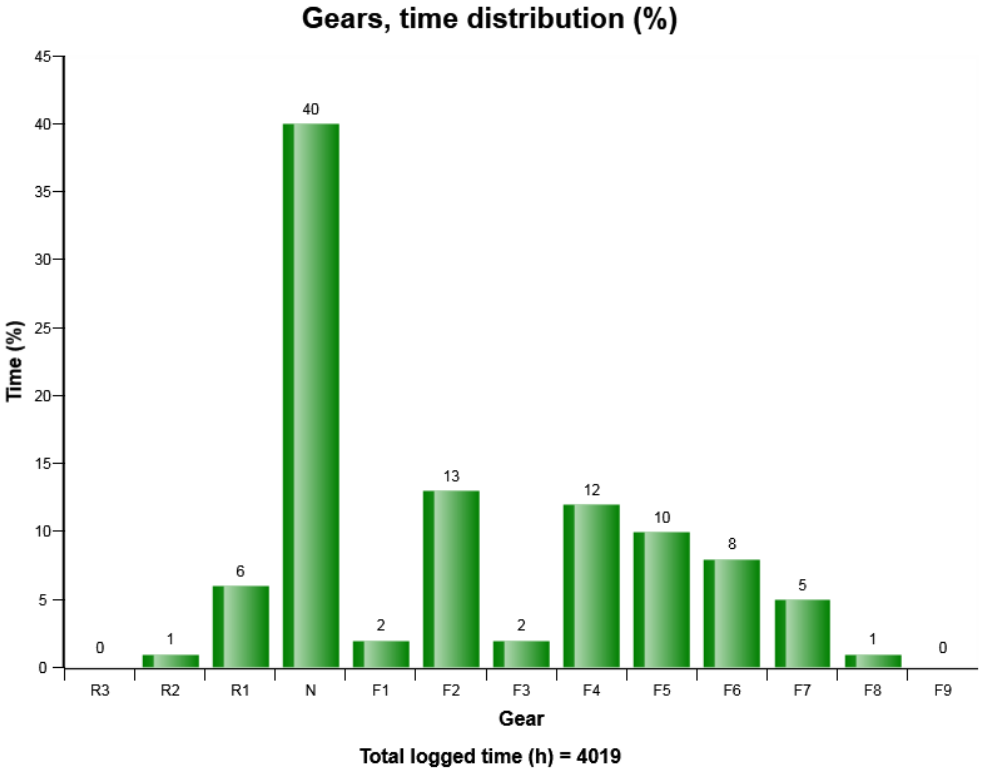

The diagram shows the time for each gear. Each bar represents a gear.

How the time is distributed between the gears depends on the operating conditions.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

Transmission oil pressure low
Total number of occurences = 1

Op hours	Year	Month	Day	Hour	Minute	Duration (sec)	Extreme (psi)
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
0	2000	0	0	0	0	0	0
2290	2016	6	21	16	25	0	3220

Definition :

This type of table shows the latest occasions when a specific event has occurred. When a specified criteria is fulfilled a registration is made. Each table row corresponds to one occasion. Operating

hours is displayed in the first column, followed by year, month, day, hour and minute to show when an event has occurred.

The rows are not ordered chronological (The latest event may be in the middle).

Only one event per minute is registered.

Over the table the total number of events is displayed.

Duration :

The duration of each event is shown after the timestamp of the event.

The duration is counted as long as the criteria is fulfilled.

Extreme value :

The extreme value column displays the most extreme value during the event.

Criteria :

In order for an occurrence of low transmission oil pressure to be recorded in a data point and the count to increment by 1, the transmission oil pressure state must change from “normal” or “error” to “low.” The event of low transmission oil pressure will end when the status changes from “low” back to “normal” or “error.”

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

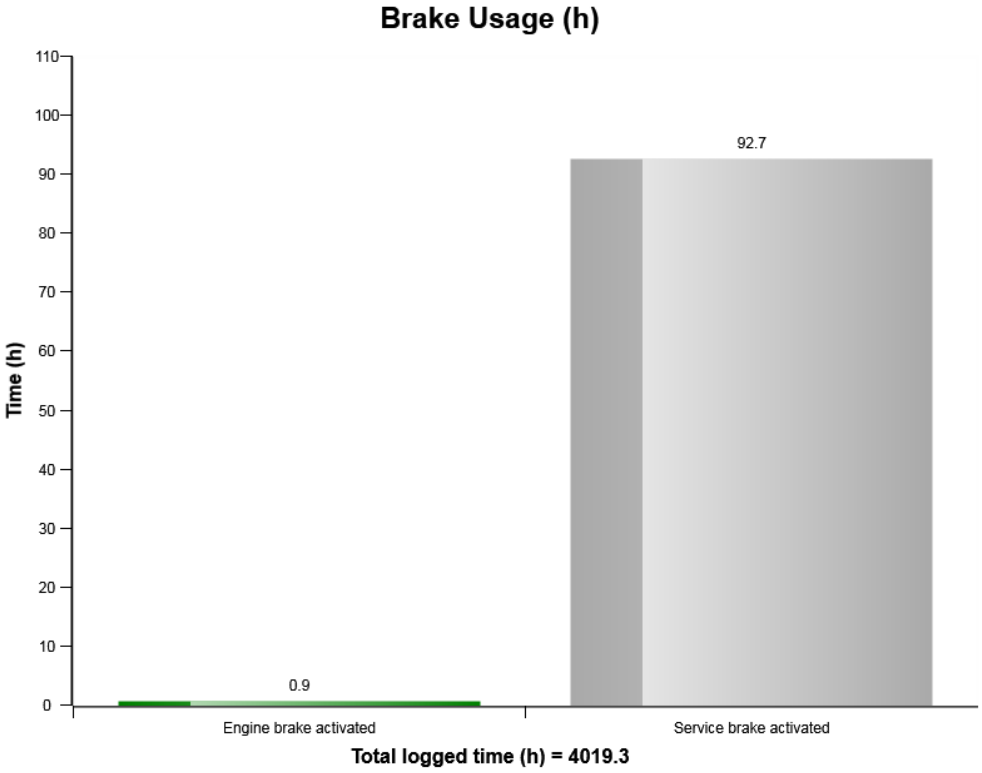

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

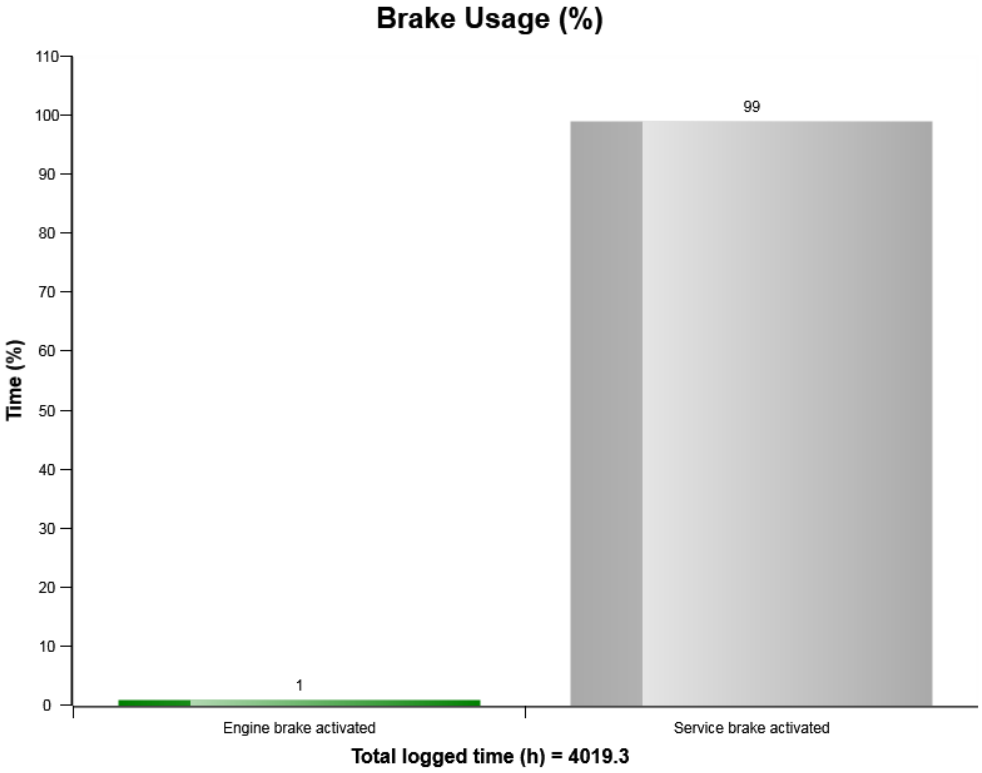

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

Low Brake Servo Pressure
Total number of occurences = 1

	Op hours	Year	Month	Day	Hour	Minute	Duration (sec)	Extreme (psi)
B	0	2000	0	0	0	0	0	0
C	0	2000	0	0	0	0	0	0
D	0	2000	0	0	0	0	0	0
E	0	2000	0	0	0	0	0	0
F	0	2000	0	0	0	0	0	0
G	0	2000	0	0	0	0	0	0
H	0	2000	0	0	0	0	0	0
I	0	2000	0	0	0	0	0	0
J	0	2000	0	0	0	0	0	0
A	3810	2017	4	12	6	53	7	2293

Definition :

This type of table shows the latest occasions when a specific event has occurred. When a specified criteria is fulfilled a registration is made. Each table row corresponds to one occasion. Operating hours is displayed in the first column, followed by year, month, day, hour and minute to show when an event has occurred.

The rows are not ordered chronological (The latest event may be in the middle).

Only one event per minute is registered.

Over the table the total number of events is displayed

Duration :

The duration of each event is shown after the timestamp of the event.

The duration is counted as long as the criteria is fulfilled.

Extreme value :

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

The extreme value column displays the most extreme value during the event.

Criteria :

In order for an occurrence of low brake servo pressure to be recorded in a data point and the count to increment by 1, the low brake servo pressure state must be alarm. Gear not in Neutral and engine must be on.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

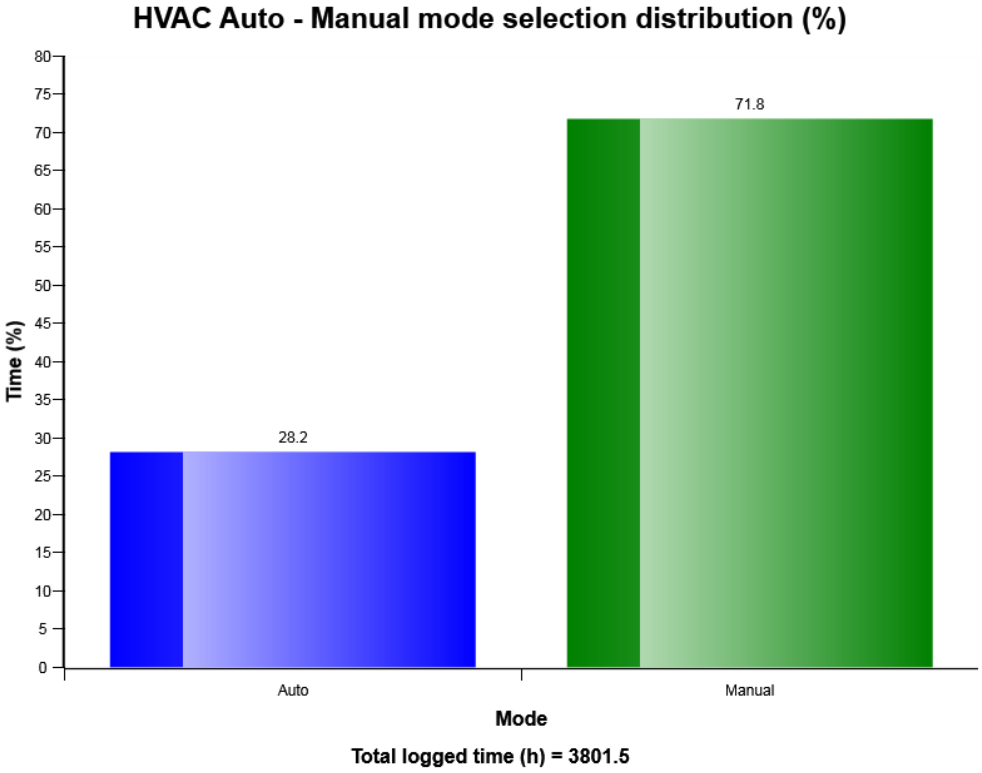

Definition:

The diagram describes auto-manual mode sele ction distribution of HVAC system in machine while it Works. The share of each mode compared to Total time of HVAC operation is displayed.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

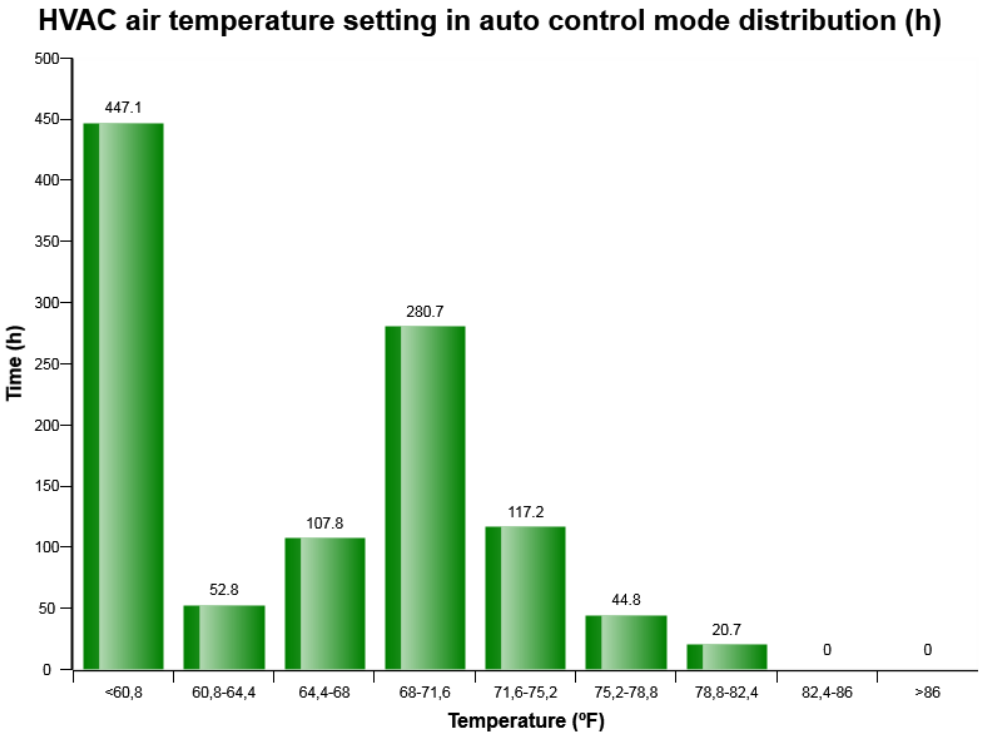

Definition:

The diagram describes air temperature setting distribution for HVAC auto control mode established by operator in Cabin

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

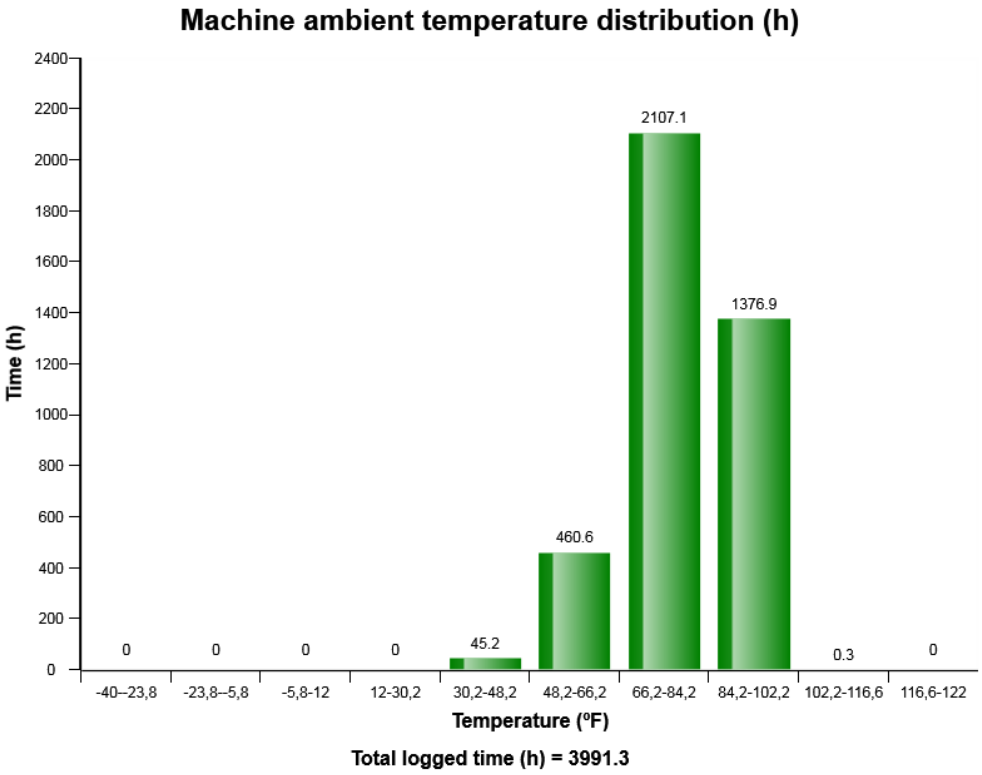

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

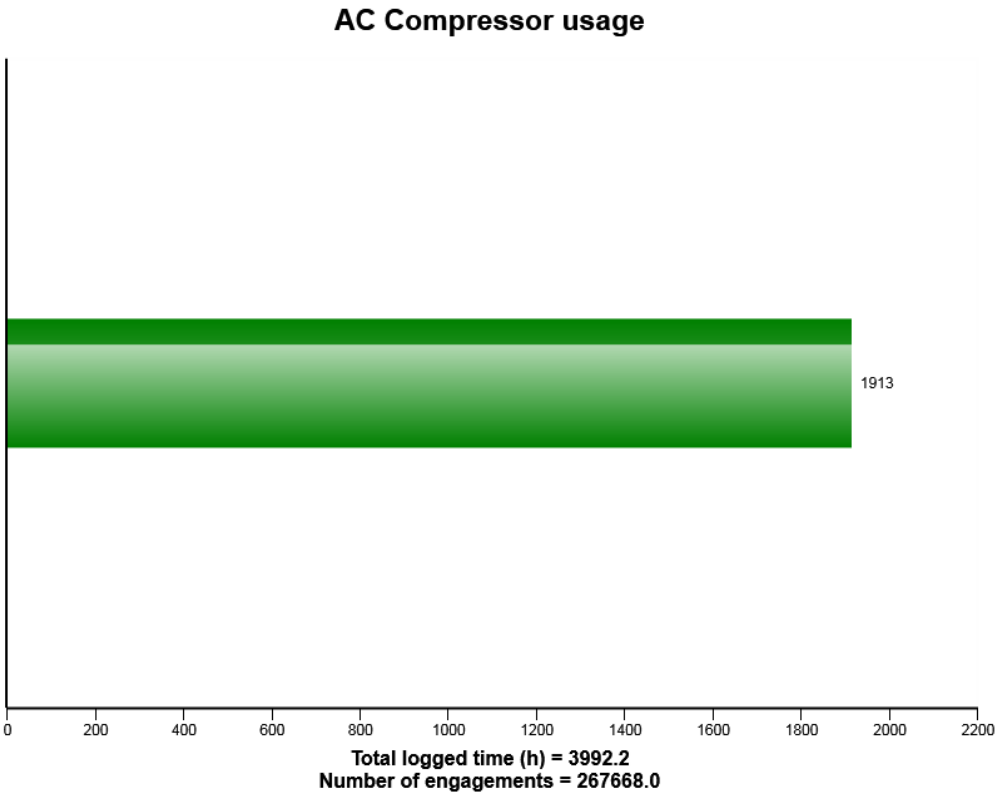

Definition:

The graph shows the total time of AC compressor engagement.

Explanation:

Green bar: Total time in hours, AC compressor has been engaged.

Under the graph the total engine running time (in hours) is displayed.

Total number of AC compressor activations is also displayed.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

-

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

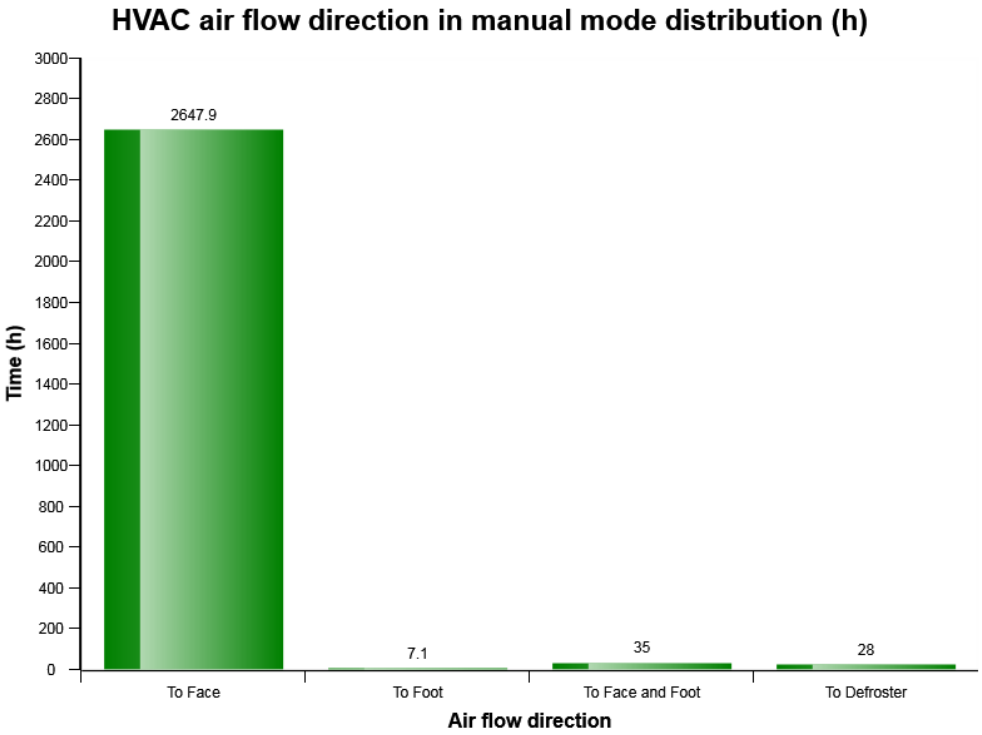

Definition:

The diagram describes air flow direction distribution for HVAC manual control mode established by operator in Cabin.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

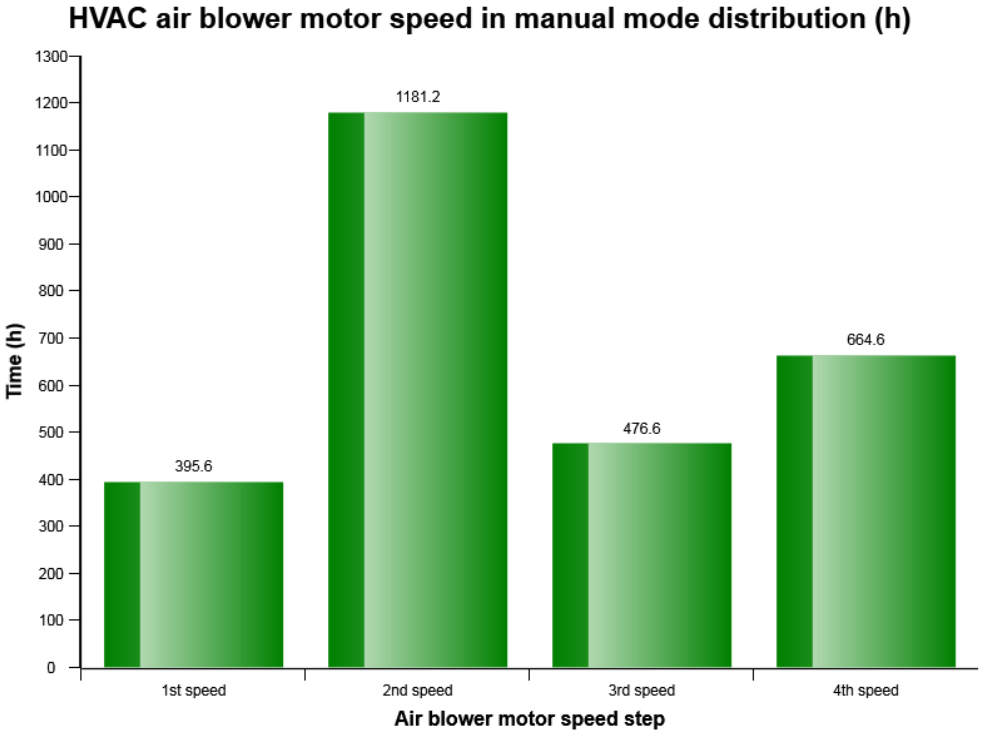

Definition:

The diagram describes air blower motor speed distribution for HVAC manual control mode established by operator in Cabin.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

AC High Pressure
Total number of occurences = 27

0	Year	Month	Day	Hours	Minute	Duration (sec)	Extreme (° F)
121	2015	6	26	12	2	14	91
150	2015	6	30	16	19	20	93
211	2015	7	11	13	40	10	91
246	2015	7	20	13	34	10	91
302	2015	8	5	15	7	95	95
349	2015	8	12	14	45	55	91
349	2015	8	12	14	24	81	90
350	2015	8	12	16	3	30	91
379	2015	8	17	16	18	36	93
388	2015	8	18	15	8	10	91
401	2015	8	20	13	26	20	93
404	2015	8	20	16	37	12	91
489	2015	9	3	14	40	20	97
534	2015	9	11	14	41	37	95
2309	2016	6	25	12	37	23	93
2378	2016	7	9	12	36	10	99
2425	2016	7	15	13	55	36	99
2498	2016	7	27	12	32	34	91
2577	2016	8	11	16	23	17	95
2703	2016	9	9	13	19	16	95

Definition :

This type of table shows the latest occasions when a specific event has occurred. When a specified criteria is fulfilled a registration is made. Each table row corresponds to one occasion. Operating

hours is displayed in the first column, followed by year, month，day，hour and minute to show when an event has occurred.

The rows are not ordered chronological (The latest event may be in the middle).

Only one event per minute is registered.

Over the table the total number of events is displayed

Duration：

The duration of each event is shown after the timestamp of the event.

The duration is counted as long as the criteria is fulfilled.

Extreme value：

The extreme value column displays the most extreme value during the event.

Criteria：

Logging is performed when, High AC Pressure signal is active. Ambient temp is viewed.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

AC Boiling Protection
Number of engagements = 0

Op hours	Year	Month	Day	Hour	Minute	Duration (sec)	Extreme (° F)
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32

Definition :

This type of table shows the latest occasions when a specific event has occurred. When a specified criteria is fulfilled a registration is made. Each table row corresponds to one occasion. Operating

hours is displayed in the first column, followed by year, month，day，hour and minute to show when an event has occurred.

The rows are not ordered chronological (The latest event may be in the middle).

Only one event per minute is registered.

Over the table the total number of events is displayed

Duration：

The duration of each event is shown after the timestamp of the event.

The duration is counted as long as the criteria is fulfilled.

Extreme value：

The extreme value column displays the most extreme value during the event.

Criteria：

Logging is performed when, Boiling protection signal is active. Ambient temp is viewed.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

AC System Cut Out Pressure
Total number of occurences = 0

Op hours	Year	Month	Day	Hour	Minute	Duration (sec)	Extreme (° F)
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32
0	2000	0	0	0	0	0	32

Definition :

This type of table shows the latest occasions when a specific event has occurred. When a specified criteria is fulfilled a registration is made. Each table row corresponds to one occasion. Operating

hours is displayed in the first column, followed by year, month，day，hour and minute to show when an event has occurred.

The rows are not ordered chronological (The latest event may be in the middle).

Only one event per minute is registered.

Over the table the total number of events is displayed

Duration：

The duration of each event is shown after the timestamp of the event.

The duration is counted as long as the criteria is fulfilled.

Extreme value：

The extreme value column displays the most extreme value during the event.

Criteria：

Logging is performed when, AC cut out pressure signal is active. Ambient temp is viewed.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

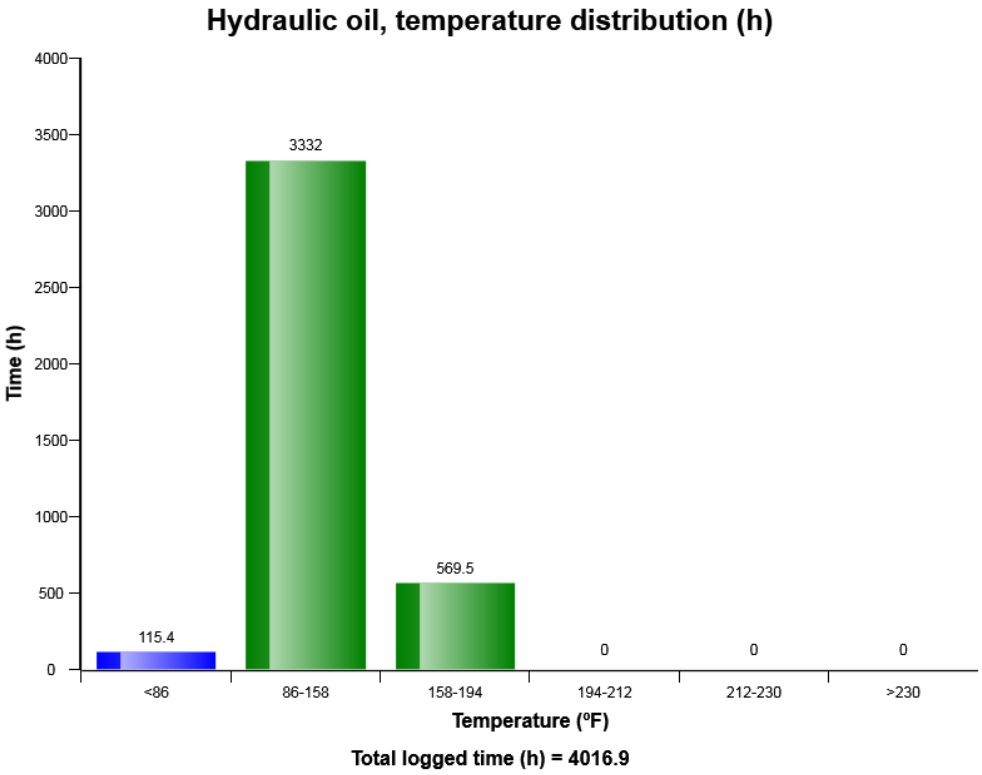

Definition:

The graph shows the time distribution of the temperature, while engine running.

Explanation:

Y-axis: Time

X-axis: Temperature distribution in classes.

Blue bar = Warm-up phase.

During the engine warm-up phase, this temperature region is passed.

It is normal to have registrations in this region.

Green bar = Normal working temperature. The Major part of the registrations shall be in this

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

region.

Yellow bar = High working temperature. It is normal to have some registrations in this region.

Red bar = Alarm.

Registrations in this region is not normal, running in this region may cause severe damage.

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

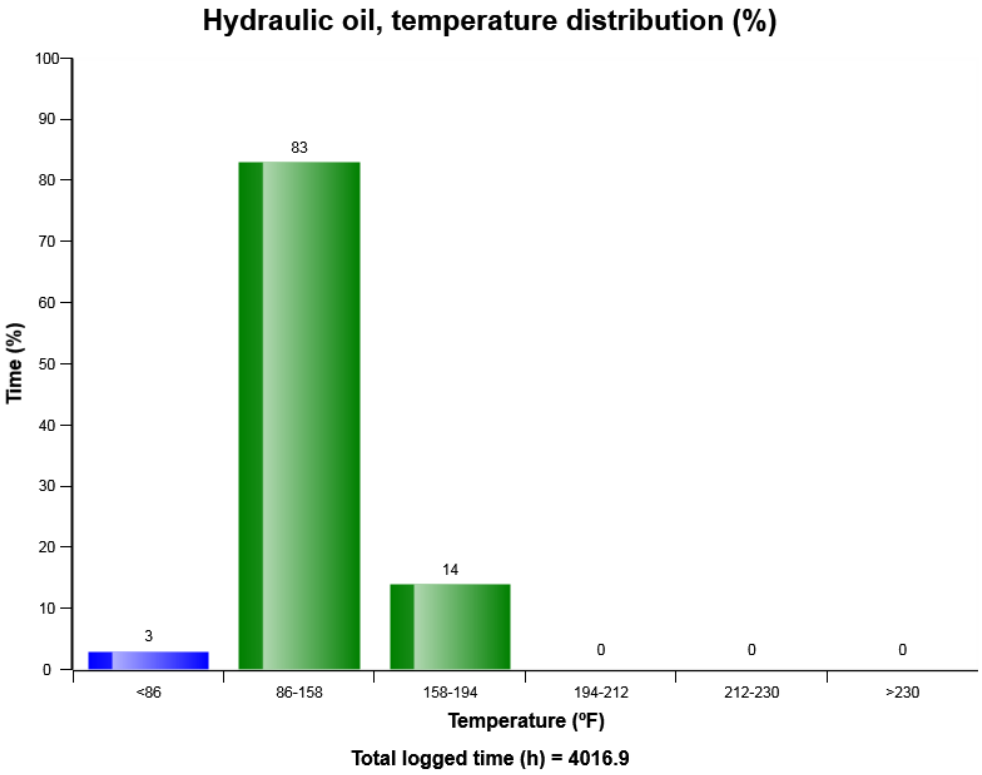

Definition:

The graph shows the time distribution of the temperature, while engine running.

Explanation:

Y-axis: Time

X-axis: Temperature distribution in classes.

Blue bar = Warm-up phase.

During the engine warm-up phase, this temperature region is passed.

It is normal to have registrations in this region.

Green bar = Normal working temperature. The Major part of the registrations shall be in this

Machine model	SerialNo	Operating Hours	Reading Date
A40G	340772	4018.8	5/31/2017

region.

Yellow bar = High working temperature. It is normal to have some registrations in this region.

Red bar = Alarm.

Registrations in this region is not normal, running in this region may cause severe damage.